

## To Access Camera Settings



## Scroll to DASH CAM Widget

## Settings

### CAMERA SETTINGS

- Front Cam      Camera Preview      Click to join Wi-Fi and see preview
- Cam 2      Camera Preview      Click to join Wi-Fi and see preview

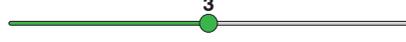
### CONNECTIVITY SETTINGS

- Wi-Fi Settings      Wi-Fi SSID      Wi-Fi Password

### PREFERENCES

- Audio Recording Save      ON/OFF (toggle) Slider images for example only
  - Download Over Wi-Fi Only      ON/OFF (toggle)
  - Camera Sounds Save      ON/OFF (toggle)      Volume Slider 
  - Parking Mode Save      ON/OFF (toggle)      Event      Motion\*      Event & Motion\*      Time Lapse\*
  - Power Saving Mode Save      ON/OFF (toggle)      Low (Default)      Medium      High
  - (Does not disable parking mode)      Activated at 11.7V      Activated at 12V      Activated at 12.3V
  - Data Overlay Save      Show Date & Time      Show Location      Show Speed
- \*These options draw more current and can deplete the vehicle battery in 1-2 days. Recommended only when vehicle is driven daily.  
(to exit power saving mode, send a command or activate ignition)

### SENSORS

- Driving Sensor Save      Driving Sensitivity Slider 
  - Parking Sensor Save      Parking Sensitivity Slider 
  - Shock Sensor Save      ON/OFF (toggle)      Shock Sensor Sensitivity Slider 
  - Tilt Sensor Save      Tilt Sensor Sensitivity Slider 
  - Window Break Sensor      Window Break Sensor Sensitivity Slider 
- Slider images for example only

### STORAGE & DATA

- Storage Save
  - CLOUD      Usage Bar      ON/OFF (toggle)
  - Upload Alarm Events to Cloud\*      \*This feature utilizes LTE data, advise customer that monthly data may be consumed in as little as 10 events being uploaded to the cloud.
  - SD CARD\*\*      Usage Bar      ● Driving      ● Parking      ● Events      ● Images
  - \*\*Drone XC supports up to 256GB of SD card capacity.
  - Partition Settings\*\*\* Save      \*\*\*Changing the partition settings will format the SD card, erasing all contents, followed by a reboot of the XC. Saved data will be lost and unrecoverable, any valuable data should be removed prior to making changes.
  - Mode 1      Driving 60%      Parking 20%      Events 15%      Images 5%
  - Mode 2      Driving 75%      Parking 5%      Events 15%      Images 5%
  - Mode 3      Driving 40%      Parking 40%      Events 15%      Images 5%
  - Format SD Card      Confirmation Pop-up (Format erases all contents of the SD card)
- Data Usage      Usage Bar      Amount used of plan allowance
- Hours of video remaining or number of images that can be stored

### FIRMWARE

- Update Dash Cam
  - 1) To update your dash cam offline, please remove your Drone XC's memory card and connect it to a computer.
  - 2) Download the Drone XC firmware update at [www.dronemobile.com/offline-updater](http://www.dronemobile.com/offline-updater) and save the file onto the memory card.
  - 3) Re-insert the memory card into the Drone XC, and with the engine on, press the "Reboot Now" button below.

**Reboot Now**